



With Drivewyze (now known as Fleetworthy) it is 100% legal to follow the instruction.




Your device will instruct you with:

- 1 *Bypass*
- 2 *Pull In Unless Closed*
- 3 *Follow Road Signs*

Always follow the device instruction to stay legal.

1 Open Drivewyze from Motive Driver App

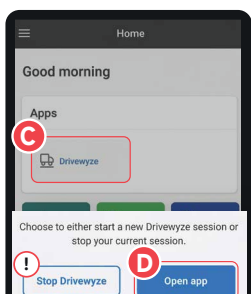

- A Log in to the Motive Driver App.
- B Connect to the vehicle gateway & complete DVIR.
- C Tap the Drivewyze tile on the home screen.
- D Tap 'Open App' & Drivewyze launches automatically.


! NOTE: When to Use the Stop Drivewyze Button

Drivers should tap this button whenever they are intentionally ending their Drivewyze session, including situations such as:

- A Logging out of their ELD or in-cab device
- B Switching to personal conveyance
- C Swapping vehicles or moving to a different truck
- D Ending their shift or parking for an extended break
- E Anytime they need Drivewyze to stop running in the background

2 Enable Required Permissions


To receive bypass alerts, ensure the permissions are enabled:

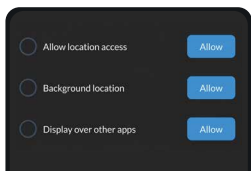

- A Location Access
- B Background Location
- C Display Over Other Apps (Android only)

3 Recall Alert History


View previous bypass instructions at the top of Fleetworthy app

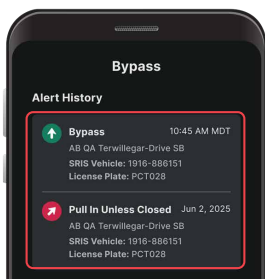

3 Bypass Florida Agriculture Inspection Sites

If your fleet has opted into the Florida Ag bypass program, you may receive a **conditional bypass**.


Drivewyze (now known as Fleetworthy) bypass unless hauling: refrigerated loads, agriculture, aquaculture, horticulture, or livestock

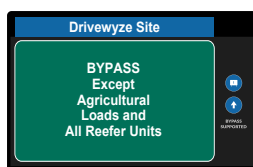

4 Bypasses for HAZMAT Haulers

Some sites require you to pull into the station if you are carrying **hazardous materials**.

If your fleet has designated itself as a Hazmat hauler with Drivewyze (now known as Fleetworthy), you may receive a different notification at these Hazmat-restricted sites.

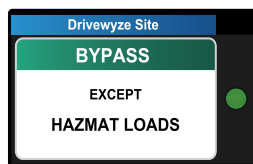

Where Can You Get Bypasses?

Fleetworthy provides bypass coverage at more sites than any other bypass service, nationwide. View current coverage at:

www.fleetworthy.com/products/weigh-station-bypass/

Bypasses at 'Mobile Sites'?

With Fleetworthy, vehicles are eligible to receive bypasses at both standard 'fixed' sites as well as 'mobile' inspection sites. Mobile sites are temporarily set up at a location where there is no existing station house or static scale

Bypasses at Weigh In Motion (WIM) Sites?

Sites in some states require WIM measured truck weight to give a bypass instruction. When approaching a WIM site be sure to follow road signs and drive in the right most lane to ensure an accurate weight reading.

Vehicles that do not drive over the WIM at sites where it is required will not be eligible to bypass and will be required to pull-in.

Privacy and Safety

Bypass requests only submit license plate, VIN, CVOR and USDOT. Driver information is NOT shared. Bypass events logs are not certified for speed enforcement and cannot be used to issue speeding tickets.

Drivers must always follow safe driving practices and never follow in cab signals if doing so poses a risk to safe driving. This includes moving safely into the lane nearest the eventual weigh station exit. If a driving instruction is delayed, always choose to pull-in safely rather than wait for an instruction

Questions/Support and Online User Guide

For a complete overview of Fleetworthy, including state specific bypass restrictions, view this User Guide online:

<https://drivewyze.com/help/bypass-restrictions/>